


GENERAL NOTES:

1. RAISE VALVE BOX TO GRADE AFTER PAVING OPERATIONS ARE COMPLETE.
2. ALL CULINARY WATER AND PRESSURIZED IRRIGATION VALVES 12" OR LARGER SHALL BE BUTTERFLY VALVES.
3. FM GRADE GREASE SHALL BE USED FOR ALL BOLTED FITTINGS.
4. CONTRACTOR SHALL SPLICE AND RE-CONNECT ALL TRACING WIRE WITH GREASED WIRE NUTS.
5. WHEN ROADWAY SURFACE IS REPAIRED OR OVERLAID, ALL CONCRETE COLLARS WITHIN DISTURBED AREAS SHALL BE REMOVED PRIOR TO PAVING. COLLARS SHALL THEN BE REPLACED AFTER PAVING IS COMPLETE.

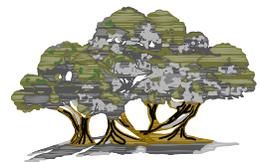

CEDAR HILLS

STANDARD
DRAWING NO.

403

VALVE BOX DETAIL